

Android Tablet Tip Sheet

On/Off?

To turn the tablet on/off, find the button on the side and press. To unlock, slide your finger across the screen.



Black Screen?

If the screen goes blank, press the "home" button *(on the front of the tablet.)*



Then slide the arrow to the right.

Too big to see?

Make what you see on the screen smaller by placing your fingers on the screen and slide them together.



Not what I ordered!

If what you see on the screen is unexpected or unwanted and won't go away, press the "back" button.



What is "wifi"?

Wi-Fi (wireless fidelity) is a popular technology that allows an electronic device to connect to the Internet wirelessly using radio waves.




How do I connect?

1 From your tablet's home screen, tap the "Settings" picture.



2 When the settings menu pops up, tap "Connections"

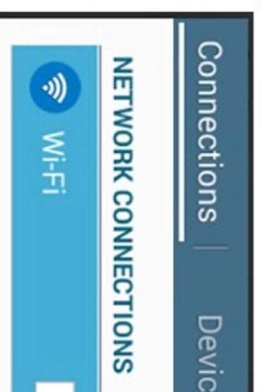

3 "Choose a Network" by tapping a network name*



*If you see a lock next to the network name, you will need a password to connect to that network.